


1


Framing for the Tile Niche

1

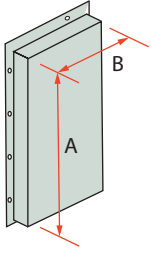

Step 1 Measure the exact height and width dimensions of the outer protrusion of your Tile Niche model.

2

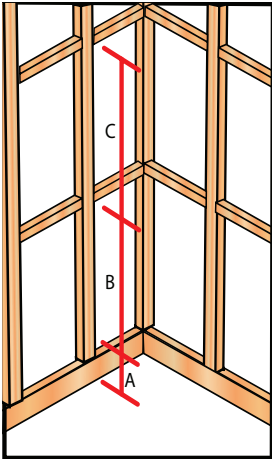

Step 2 - Measure 3 heights


A= Height of the tray above the floor, and take this into account when measuring position B and C

B= Height the bottom of the Tile Niche will be installed into the wall.

C= Height the top of the Tile Niche will be installed into the wall.

Using a level mark these lines across the adjacent studs.


3

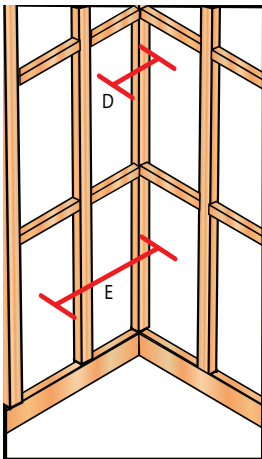

Step 3- Measure from the inside corner of the wall out to the preferred position of where the inner edge of the Tile Niche will be installed (D). Using a level mark this position on the adjacent studs and down to the bottom plate.

Measure the width of the Tile Niche and again mark the studs and bottom plate (E).

4

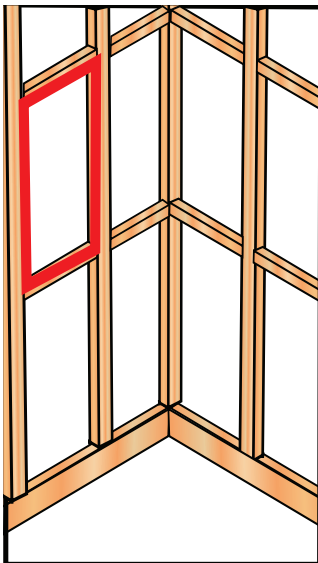

Step 4- Frame out the wall, or modify existing framing so that both sides, and the top and bottom of the Tile Niche are surrounded by framing.

Ensure that the Tile Niche fits tightly in the gap between the framing and the Tile Niche on all 4 sides, this provides additional support to the Tile Niche.


5

Step 5- Install a 10mm wide bead of silicone around the outside of the opening.
Install a second 10mm wide bead of silicone approx 20mm out from the opening.

2

Wall Lining and Final Installation

6

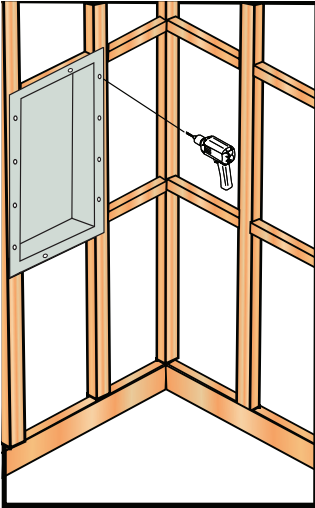

7

Step 6- Install The Tile Niche into the framing.


Push the outside flange onto the front face of the framing. Allow silicone to compress as the flange is pushed against the frame.

Step 7- Drill a pilot hole into the framing, and install the fixing screws.

Ensure that all screws are tight, and the Tile Niche does not move within the framing.

Clean off any excess Silicone, and create a bead around the edge of the flange to ensure the joint between the flange and the framing is sealed.

8

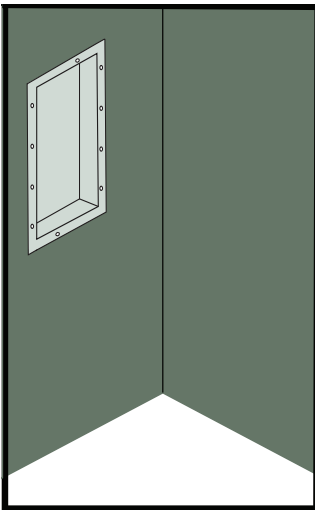

Step 8 - Cut the wall substrate to suit the outside dimension of the flange on the Tile Niche. Install the wall substrate.

You are ready to waterproof the wall with the membrane of your choice. Each membrane system has different primers and tapes to prepare and seal the niche surface and the joint between the wall substrate and the Tile Niche.

Note - Application of membranes and waterproofing should only be carried out by a PSI certified Installer.